



Fuse Value Amps	Color Code
4	Pink
5	Tan
10	Red
15	Light Blue
20	Yellow
25	Natural
30	Light Green

Fuse Position	Amps	Circuits Protected
1	15	Radio, Dome/Cargo Lamps
2	5 c.b.	Windshield Wipers
4	15	Stop/Hazard Lamps
5	15	Turn Lamps, Backup Lamps, Brake Fluid Level Sensor
6	—	Not Used
7	10	A/C Compressor Control
8	20	Horn
9	30	Air Conditioner/Heater
10	15	Lamps on Warning, Park/License Lamps
11	15	Radio, Electric Shift Control, Speed Control
12	20 c.b.	Multi-Function Switch, Cigar Lighter, Power Lumbar Seats
13	10	Instrument Illumination
14	30 c.b.	Power Windows
15	20	Rear Anti-Lock Brakes
16	—	Not Used
17	15	Electric Shift Control, Warning Chime Module, Low Oil Level Relay, Instrument Cluster
18	10	HEGO

Power Distribution

The alternator is connected to maxi-fuses within the power distribution box which is then connected together with the Battery at the starter relay hot terminal. Circuits and components are protected by maxi-fuses. Low power circuits are also protected by fuses.

The Ignition Switch and Main Light Switch are powered at all times, as are Fuses 1, 4, 8, 10 and Circuit Breaker 12 in the Fuse Panel. The other fuses are powered through the Ignition Switch or the Main Light Switch.

Position 3 is not used and is covered by Circuit Breaker 2.