

FLASHOUT CODES CHART**CONDITION**

No Flashout Code

Yellow REAR ABS Light Flashes 1 Time
This Code Should Not Occur

Yellow REAR ABS Light Flashes 2 Times
Open Isolate Circuit

Yellow REAR ABS Light Flashes 3 Times
Open Dump Circuit

Yellow REAR ABS Light Flashes 4 Times
Red Brake Warning Light Illuminated
RABS Valve Switch Closed

Yellow REAR ABS Light Flashes 5 Times
System Dumps Too Many Times in 2WD (2WD and 4WD vehicles). Condition
Occurs While Making Normal or Hard Stops. Rear Brake May Lock

Yellow REAR ABS Light Flashes 6 Times
(Sensor Signal Rapidly Cuts In and Out). Condition Only Occurs While Driving

Yellow REAR ABS Light Flashes 7 Times
No Isolate Valve Self Test

Yellow REAR ABS Light Flashes 8 Times
No Dump Valve Self Test

Yellow REAR ABS Light Flashes 9 Times
High Sensor Resistance

Yellow REAR ABS Light Flashes 10 Times
Low Sensor Resistance

Yellow REAR ABS Light Flashes 11 Times
Stoplamp Switch Circuit Defective. Condition Indicated Only When Driving
Above 35 mph

Yellow REAR ABS Light Flashes 12 Times
Fluid Level Switch Grounded During a RABS Stop

Yellow REAR ABS Light Flashes 13 Times
Speed Processor Check

Yellow REAR ABS Light Flashes 14 Times
Program Check

Yellow REAR ABS Light Flashes 15 Times
Memory Failure

Yellow REAR ABS Light Flashes 16 Times or More
16 or More Flashes Should Not Occur

NOTE: Refer to Obtaining the Flashout Code in this section for procedure to obtain flashout code.

CAUTION: WHEN CHECKING RESISTANCE IN THE RABS SYSTEM, ALWAYS DISCONNECT THE BATTERY. IMPROPER RESISTANCE READINGS MAY OCCUR WITH THE VEHICLE BATTERY CONNECTED.