

NOTE: THE ENGINE COOLANT TEMPERATURE GAUGE RECEIVES POWER FROM PIN1 OF C216 ON VEHICLES NOT EQUIPPED WITH TACHOMETER.

SEE POWER DISTRIBUTION PAGE 13-14

HOT IN START OR RUN

*** 2.5L**

FUSE JUNCTION PANEL PAGE 13-14

