



HOT IN START OR RUN

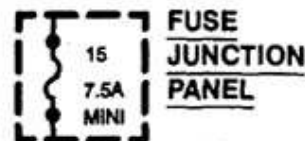


584 YE
C216



12V (START OR RUN)

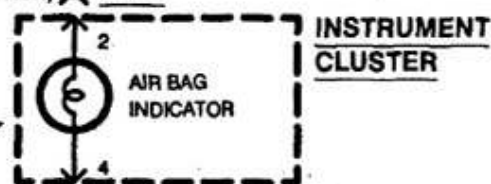

Indicator will flash if module detects a system hard fault. The lamp will stay on until fault is corrected or if module is disconnected.

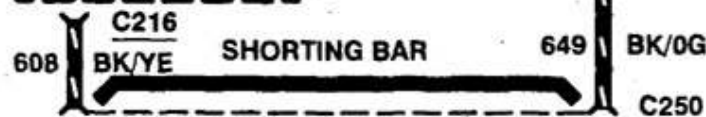


TO S205

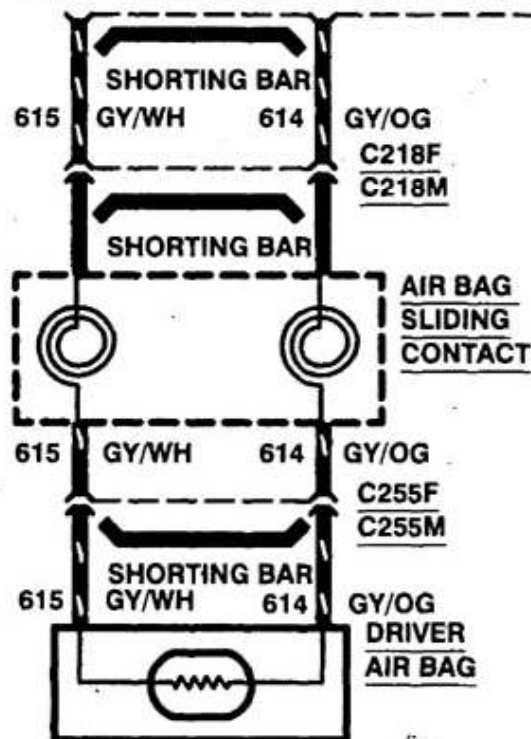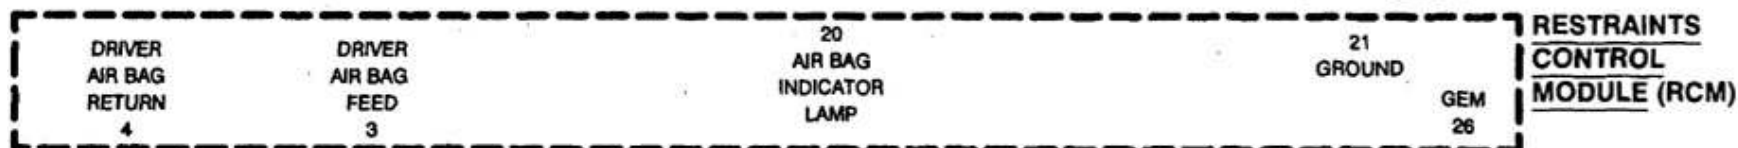

1083 LB/BK C250

C221

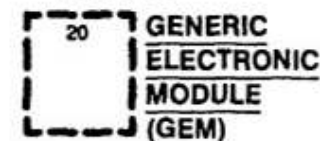

Inflates upon impact, according to sensor reaction.