



engine – 3.0L

12B637	E 1
B8 ... Throttle Position Sensor (TPS) (9B989)	D 5
B10 .. Engine Coolant Temperature (ECT) sensor (12A648)	E 4
B41 .. Camshaft position sensor (6B288)	A 3
B43 .. Crankshaft position sensor (6C315)	E 3
B45 .. Knock sensor (12A699)	C 1
B47 .. Heated Oxygen Sensor (HO2S) #21 (9F472)	B 5
B227 .. Engine Coolant Temperature (ECT) sender	E 2
C103	D 1
C108	C 1
C110	B 4
C172	B 5
C189	D 5
C1061	E 2
C1064	E 4
C1066	D 5
C1120	E 3
C1134	B 2
C1180	A 3
N17 .. Oil pressure switch (9278)	D 1
T1 ... Ignition coil (12029)	A 2
Y133 Idle Air Control (IAC) valve (9F715)	D 5