


EXTERIOR LIGHTS

Back-up Lamps Wiring Diagram for Ford Ranger 2008

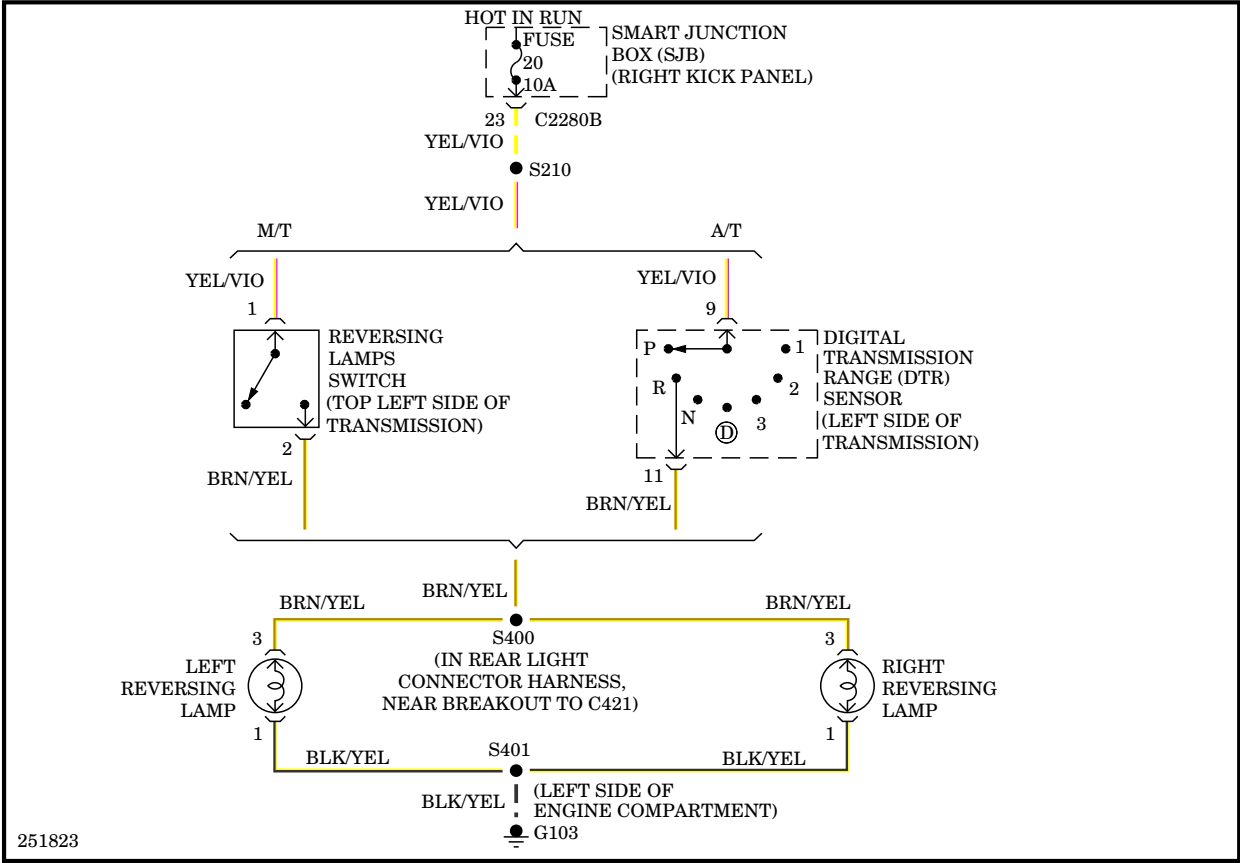


List of elements for Back-up Lamps Wiring Diagram for Ford Ranger 2008:

- (left side of engine compartment) g103
- A/t
- C2280b
- Digital transmission range (dtr) sensor (left side of transmission)

- Hot in run fuse 10a
- Left reversing lamp
- M/t
- Reversing lamps switch (top left side of transmission)
- Right reversing lamp
- S210
- S400 (in rear light connector harness, near breakout to c421)
- S401
- Smart junction box (sjb) (right kick panel)

Exterior Lamps Wiring Diagram (1 of 2) for Ford Ranger 2008

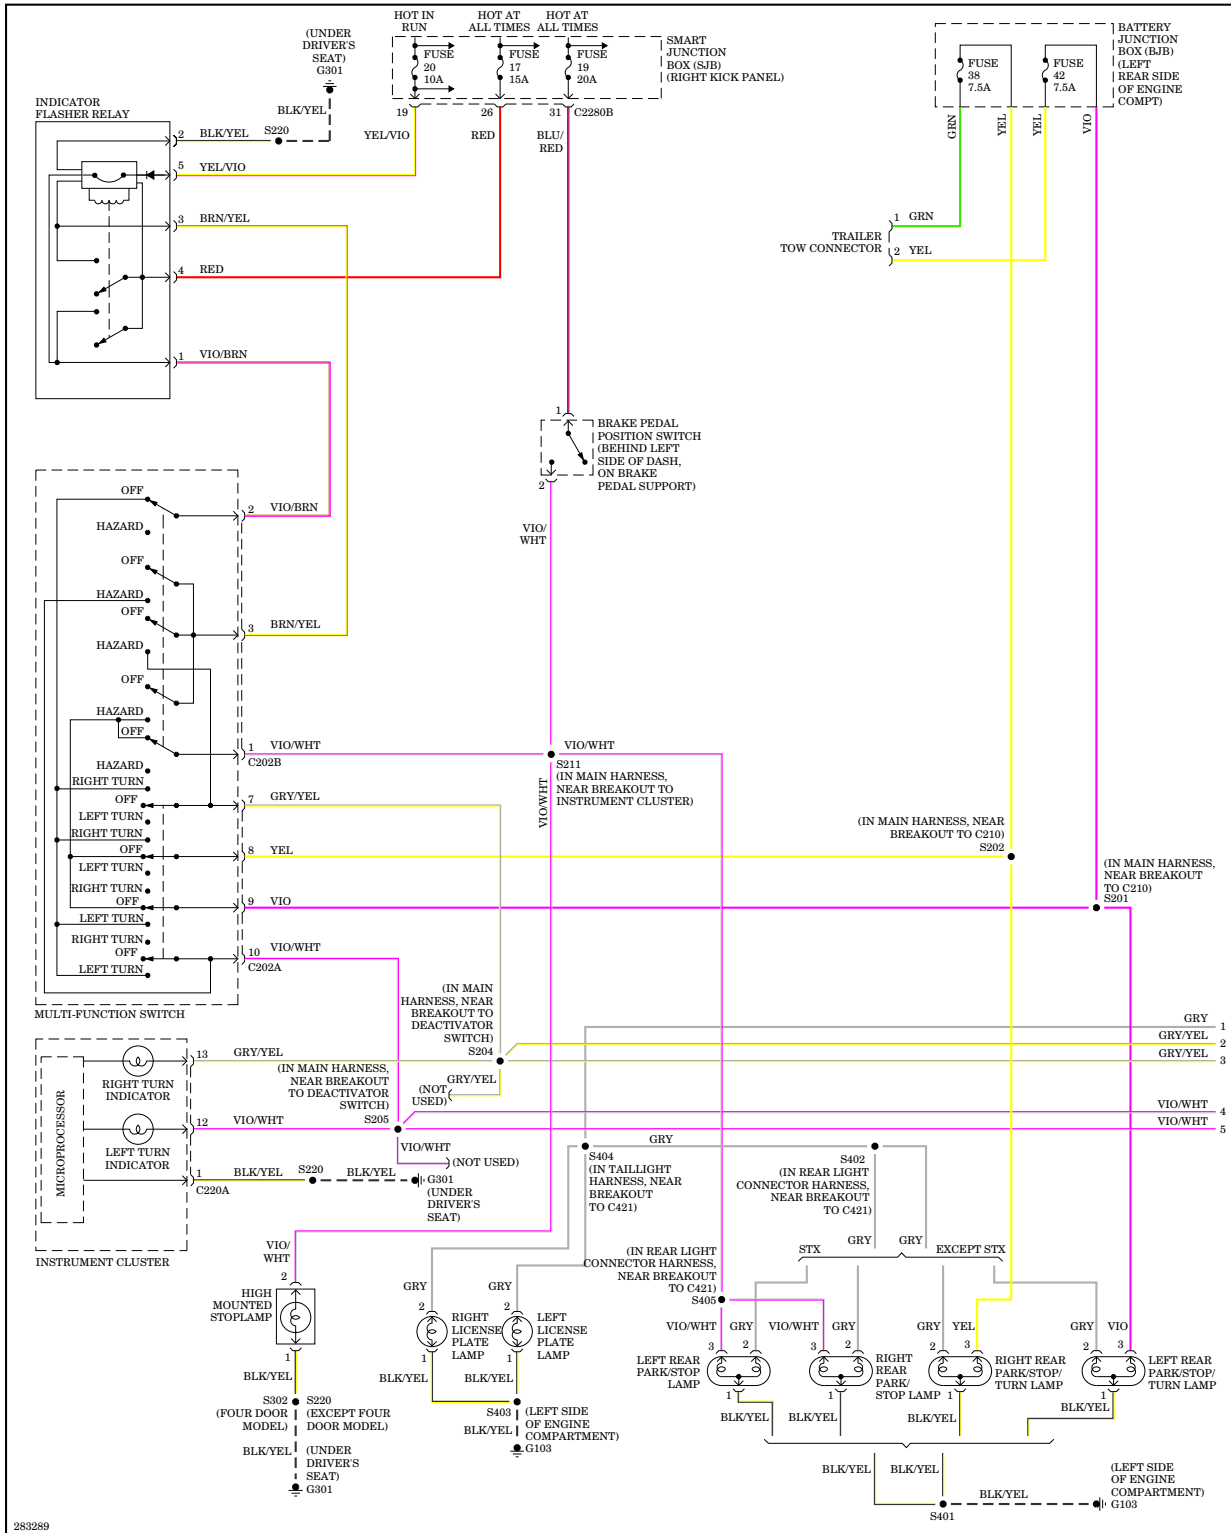




List of elements for Exterior Lamps Wiring Diagram (1 of 2) for Ford Ranger 2008:

- (in main harness, near breakout to c210) s201
- (in main harness, near breakout to c210) s202
- (in main harness, near breakout to deactivator switch) s204
- (in main harness, near breakout to deactivator switch) s205
- (in rear light connector harness, near breakout to c421)
- (in rear light connector harness, near breakout to c421) s405
- (left side of engine compartment) g103
- (not used)
- (under driver's seat) g301
- Battery junction box (bjb) (left rear side of engine compt)
- Brake pedal position switch (behind left side of dash, on brake pedal support)
- C202a
- C202b
- C220a
- C2280b
- Except stx
- Fuse 10a
- Fuse 15a
- Fuse 20a
- Fuse 7.5a
- G301 (under driver's seat)
- Hazard
- High mounted stoplamp
- Hot at all times
- Hot in run
- Indicator flasher relay
- Instrument cluster
- Left license plate lamp
- Left rear park/stop lamp
- Left rear park/stop/ turn lamp
- Left turn
- Left turn indicator
- Microprocessor
- Multi-function switch
- Off
- Red
- Right license plate lamp
- Right rear park/ stop lamp
- Right rear park/stop/ turn lamp
- Right turn
- Right turn indicator
- S220
- S220 (except four door model)
- S302 (four door model)
- S401
- S402
- S403
- S404 (in taillight harness, near breakout to c421)
- Smart junction box (sjb) (right kick panel)
- Stx
- Trailer tow connector

Exterior Lamps Wiring Diagram (2 of 2) for Ford Ranger 2008

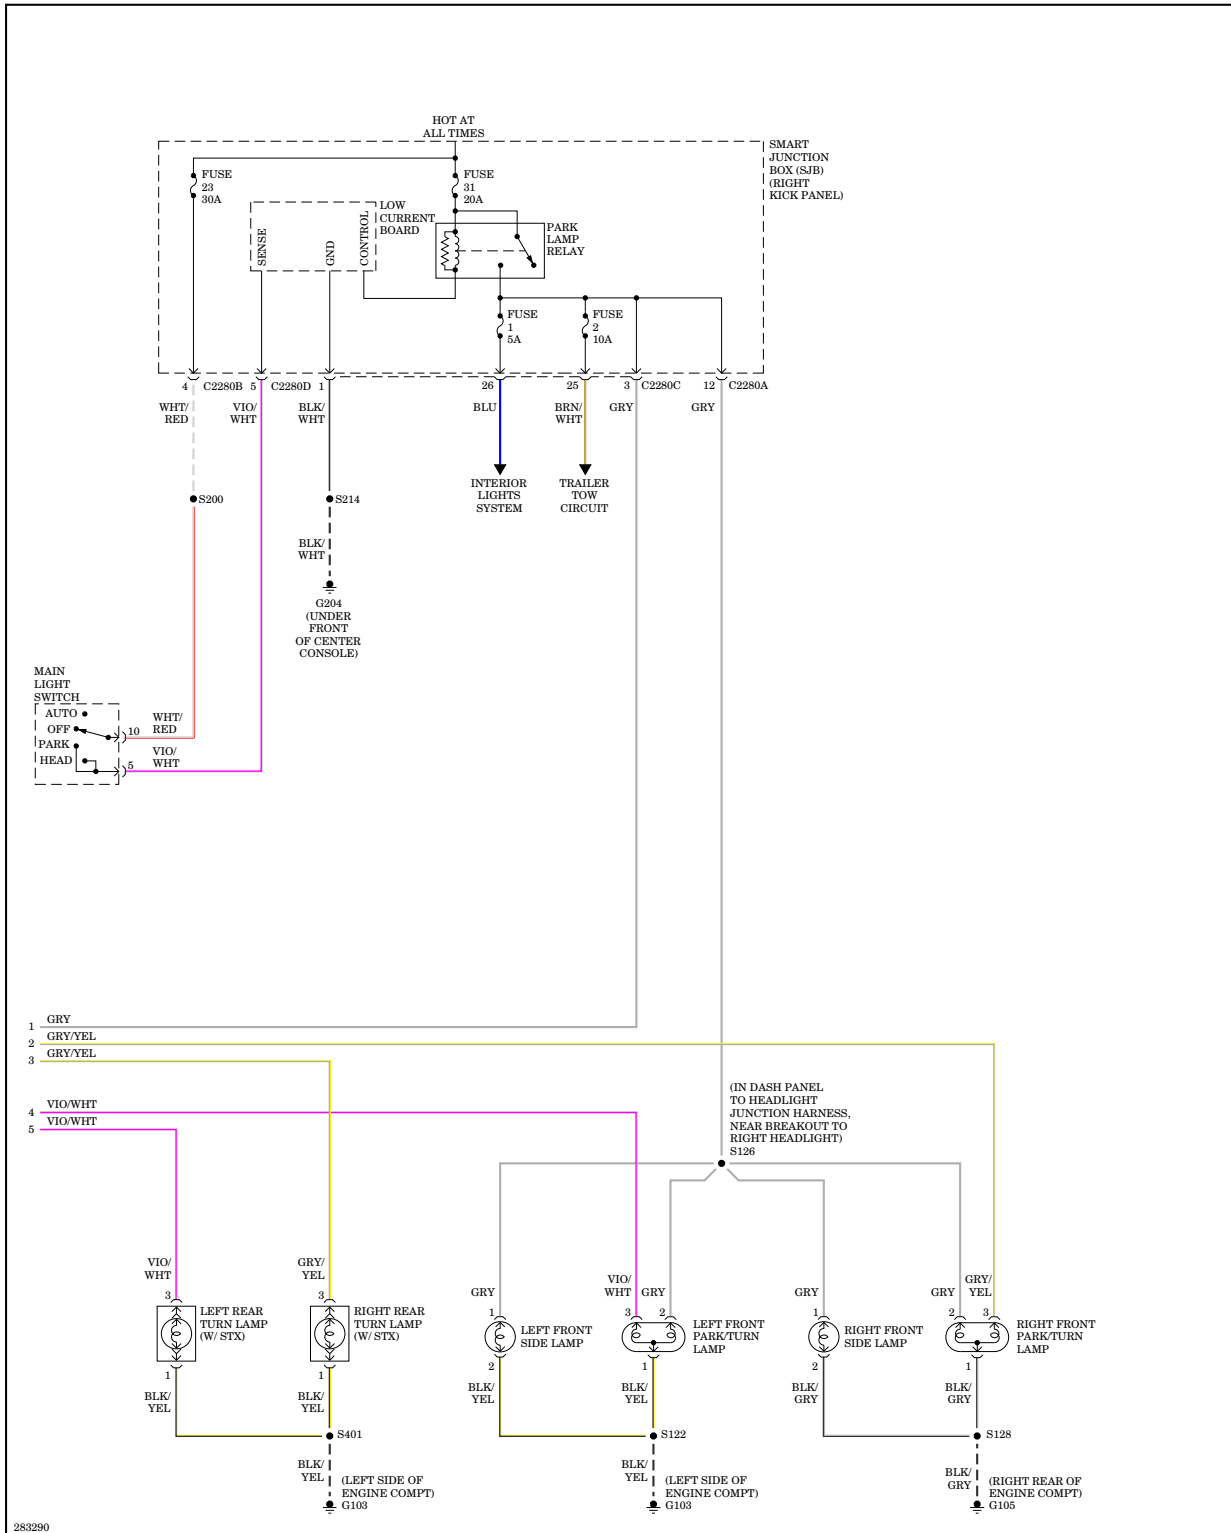


List of elements for Exterior Lamps Wiring Diagram (2 of 2) for Ford Ranger 2008:

- (in dash panel to headlight junction harness, near breakout to right headlight) s126
- (left side of engine compt) g103
- (right rear of engine compt) g105
- Auto
- C2280a
- C2280b
- C2280c
- C2280d
- Control
- Fuse 10a

- Fuse 20a
- Fuse 30a
- Fuse 5a
- G204 (under front of center console)
- Gnd
- Head
- Hot at all times
- Interior lights system
- Left front park/turn lamp
- Left front side lamp
- Left rear turn lamp (w/ stx)
- Low current board
- Main light switch
- Off
- Park
- Park lamp relay
- Right front park/turn lamp
- Right front side lamp
- Right rear turn lamp (w/ stx)
- S122
- S128
- S200
- S214
- S401
- Sense
- Smart junction box (sjb) (right kick panel)
- Trailer tow circuit

Trailer Tow Wiring Diagram for Ford Ranger 2008

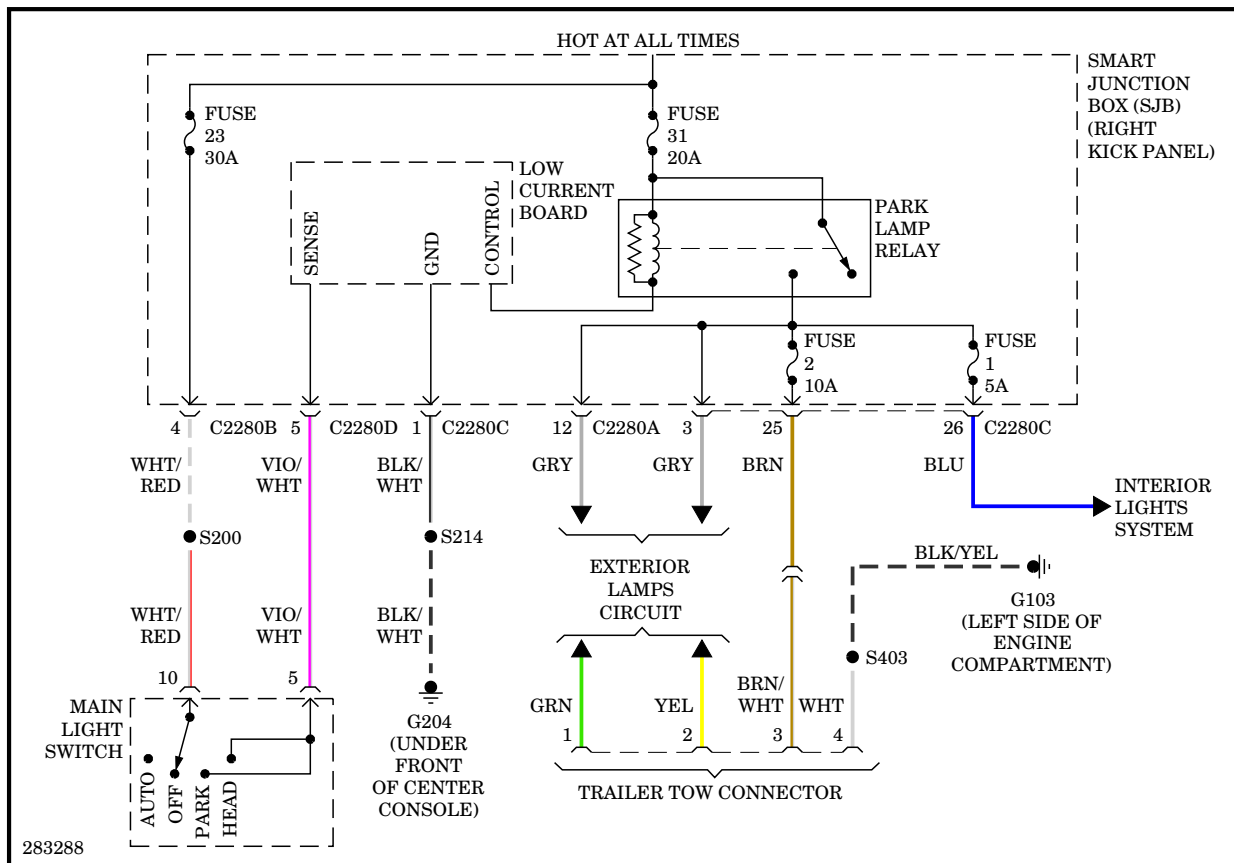

List of elements for Trailer Tow Wiring Diagram for Ford Ranger 2008:

- Auto
- C2280a
- C2280b
- C2280c
- C2280d c2280c
- Control
- Exterior lamps circuit
- Fuse 10a
- Fuse 20a
- Fuse 30a

- Fuse 5a
- G103 (left side of engine compartment)
- G204 (under front of center console)
- Gnd
- Head
- Hot at all times
- Interior lights system
- Low current board
- Main light switch
- Off
- Park
- Park lamp relay
- S200
- S214
- S403
- Sense
- Smart junction box (sjb) (right kick panel)
- Trailer tow connector

[ANTI-LOCK BRAKES](#)[BODY CONTROL MODULE](#)[AIR CONDITIONING](#)[ANTI-THEFT](#)[CRUISE CONTROL](#)[ENGINE PERFORMANCE](#)[COMPUTER DATA LINES](#)[COOLING FAN](#)[EXTERIOR LIGHTS](#)[HEADLIGHTS](#)[POWER MIRROR](#)[HORN](#)[POWER DOOR LOCKS](#)[POWER DISTRIBUTION](#)[INSTRUMENT CLUSTER](#)[GROUND DISTRIBUTION](#)[INTERIOR LIGHTS](#)[POWER WINDOWS](#)[RADIO](#)[TRANSMISSION](#)[SHIFT INTERLOCK](#)[STARTING/CHARGING](#)[SUPPLEMENTAL RESTRAINTS](#)[WARNING SYSTEMS](#)[WIPER/WASHER](#)