

This sensor houses the START circuits for the ignition system to allow the vehicle to be started in PARK or NEUTRAL. Also contains the backup lamp circuits, which are closed in REVERSE. Signals gear position to PCM.

