

A	Page	Page	Page
Add-On Electric Equipment	8-6	Before Driving	Catalytic Converter
Adjusting the Volume	4-55	After getting in	Center Console
Adjusting Tone Balance and Speaker Output ...	4-56	Before getting in	Center Seat Belt, Front
Air Cleaner Filter	7-7	Belts, Front Seat	Changing a Flat Tire
Air-Conditioner Switch	4-49	Belt, Front Center Seat	Changing the Oil
Aluminum Wheel Maintenance	6-4	Belts, Rear Lap	Charging System Warning Light
AM/FM Radio with Cassette Player	4-69	Body Lubrication	Checking Power Steering Fluid Level
AM/FM Radio with Compact Disc Player	4-54	Bolster Support Adjustment	Child-Restraint System
AM/FM Stereo Radio	4-69	Brake System	Attaching seats with tether straps
Antilock Brakes	4-22	Brake lights	Installing
Appearance Care	6-1	Fluid level	Older children
Ashtray	4-40	Foot brake	Circuit Breakers
Automatic Memory Load	4-61	Hydraulic power brakes	Cleaning the Seat Belt Webbing
Automatic Memory Store	4-61	Parking brake	Cleaning the Upholstery and Interior Trim
Automatic Transmission	4-10	Rear-wheel antilock brake system (ABS)	Cleaning the Window Interiors
Controls	4-10	Warning light	Cleaning the Tape Player
Driving tips	4-11	Break-In Period	Climate Control Systems
Overdrive	4-12	Bulb Replacement, Front	Air conditioning switch
Ranges	4-10	Bulb Replacement, Rear	Dehumidifying
Automatic Transmission Fluid	7-26		Fan switch
			Function selector
			Heater controls
			Operating tips
			Temperature control lever
			Windshield defrosting and defogging
			Clock Operation
			Clutch Fluid Level
			Compact Disc Player

	Page		Page		Page
Coolant, Engine	7-19	Driving		Engine Exhaust Gas (Carbon Monoxide)	3-4
Changing	7-19	After getting in	3-5	Engine Oil	7-14
Inspecting	7-19	Before getting in	3-5	Changing engine oil and filter	7-16
Overheating	5-2	Hazardous	3-7	Inspecting engine oil level	7-15
Temperature gauge	4-28	In flooded areas	3-11	Pressure gauge	4-28, 7-15
Cooling (Air-Conditioning)	4-49	On hills	3-11	Recommended oil	7-14
Cruise Control	4-24	On sand	3-11	Warning light	4-33
Accelerating with cruise control on	4-26	Rocking the vehicle	3-8	Engine Temperature Gauge	4-28
To cancel	4-25	Wheel spin	3-8	Exterior Care	6-2
To decrease cruising speed	4-26	Winter	3-9	Aluminum wheel maintenance	6-4
To increase cruising speed	4-26	With a trailer	3-12	Bright-metal maintenance	6-3
To resume cruising speed	4-26	Driving Your Mazda	4-1	Maintaining the finish	6-2
To set speed	4-25			Repairing finish damage	6-3
Customer Assistance	8-2			Underbody maintenance	6-3
Customer Information	8-1				
D		E		F	
Dashboard Illumination	4-31	Emergencies	5-1	Fan Switch	4-43
Dashboard Overview	1-3	Emergency Starting	5-3	Filters	
Day/Night Mirror	2-28	Jump-starting	5-3	Air cleaner	7-7
Dehumidifying	4-48	Push-starting	5-5	Oil	7-16
Door Locks	2-3	Engine Block Heater	4-5	Flasher, Hazard Warning	5-2
Inside	2-3	Emission Control System	3-4	Flashing the Headlights	4-35
Outside	2-3	Engine Compartment Overviews	7-11	Flat Tire	5-14
Power	2-4	Engine Coolant	7-19	Changing a flat tire	5-16
Doors	1-4	Adding coolant	7-19	Temporary spare tire	5-20
		Changing coolant	7-19	Tire, jack and tool storage	5-14
		Inspecting coolant level	7-19		
		Overheating	5-2		

	Page
Fluids	
Automatic transmission	7-26
Brake	7-21
Capacities	9-4
Clutch	7-23
Power steering	7-24
Windshield washer	7-27
FM Characteristics	4-51
Foot Brake	4-19
4x4 Indicator Light	4-34
4-Wheel Drive Systems	4-12
Electronic shift control	4-15
Lever operated	4-12
Manual locking hubs	4-13
Off pavement edge	4-19
Off-road driving	4-18
Lever operated	4-12
Lever operated with manual locking hubs	4-13
Front Seat Passenger Position	2-24
Front Seat Belts	2-17
Front Center Seat Belt	2-18
Fuel Gauge	4-29
Fuel-Filler Cap	2-10
Fuel-Filler Lid	2-9
Fuel Injected Engines	4-4
Fuel Pump Shut-Off Switch	4-6
Fuel Requirements	3-2

	Page
Function Selector	4-43
Defrosting position	4-46
Floor-defrosting position	4-45
Floor position	4-45
Heating	4-46
Panel-floor position	4-45
Panel position	4-44
Ventilation	4-46
Fuses and Circuit Breakers	5-5
Circuit breakers	5-7
Fuse panel description	5-8
Fuse replacement	5-6

G

GAWR and GVWR	3-14
Gauges	4-28
Battery voltage	4-29
Engine oil pressure	4-28
Engine temperature	4-28
Fuel	4-29
Odometer	4-28
Speedometer	4-28
Tachometer	4-29
Trip odometer	4-28
Glove Box	4-40

H

Hazard Warning Flasher	5-2
Hazardous Driving	3-7
Headlight Bulb Replacement	7-36
Headlight High-Beam Indicator Light	4-34
Headlights	4-34
Headrest Adjustment	2-13
Heater Controls	4-49
Heating	4-46
High Speed Driving	3-9
Hood Release	2-8
Horn	2-27

I

Ignition Switch Positions	4-2
ACC (Accessory)	4-2
LOCK	4-2
OFF	4-2
ON	4-2
START	4-2
Importer/Distributors	8-4
In Case of Emergency	5-1
Infant Seat	2-22
Inside Door Lock	2-3

	Page		Page		Page
Inspecting Automatic Transmission		K		M	
Fluid Level	7-26	Key	2-2	Maintenance	7-1
Inspecting Brake Fluid Level	7-21	Knowing Your Mazda	2-1	Malfunction Indicator Light	4-33
Inspecting Clutch Fluid Level	7-23			Manual Transmission Operation	4-8
Inspection Engine Coolant	7-19			Recommendations for shifting	4-9
Inspecting Power Steering Fluid Level	7-24			Shift pattern	4-8
Inspecting Washer Fluid Level	7-27	L		Map Light	2-29
Installing a Child-Restraint System	2-23	Label Information	3-23	Mazda Importer/Distributors	8-4
Instrument Clusters	4-27	Lane Change Signals	4-36	Mirrors	2-27
Interior Care	6-4	Lighter	4-39	Day/night mirror	2-28
Cleaning seat belt webbing	6-5	Lighting Control	4-34	Outside mirrors	2-27
Cleaning upholstery and interior trim	6-4	Combination cargo and high-mount		Vanity	4-41
Cleaning window interiors	6-5	stoplight	4-37	Money-Saving Suggestions	3-6
Dashboard precautions	6-4	Daytime running light system	4-36		
Interior Light	2-29	Headlights	4-34	O	
With map light	2-29	Turn and lane change signals	4-36	Odometer	4-28
Without map light	2-29			Off-Road Driving	4-18
Interior Overview	1-2	Lights		Oil, Engine	7-14
Introduction, Maintenance	7-2	Head	4-34	Operating Conditions of CD Player	4-68
		Interior	2-29	Outside Door Lock	2-3
		Map	2-29	Outside Mirrors	2-27
J		Parking	7-40	Outside the United States and Canada	8-5
Jack Storage	5-14	Side marker	7-41	Overdrive	4-12
Removal	5-15	Warning	4-31	Overheating	5-2
Jump Seats	2-15	Locking Hubs, Manual	4-13	Overloading	3-22
Jump-Starting	5-3	Low Brake Fluid Level Warning	4-31		
		LOW RANGE Indicator Light	4-34		
		Lumbar Support Adjustment	2-13		

	Page
Owner Maintenance	7-8
Owner Maintenance Precautions	7-9
Owner Maintenance Schedule	7-8
At least monthly	7-8
At least twice a year	7-9
When refueling	7-8

P

Parking Brake	4-21
Parking Brake Warning Light	4-31
Power Door Locks	2-4
Power Steering	4-24
Power Steering Fluid Level	7-24
Power Windows	2-5
Protecting Your Mazda	3-1
Push-Starting	5-5

R

Radios	
AM/FM stereo radio	4-71
Clock operation	4-81
How to tune radio stations	4-73
Selecting the AM or FM frequency band	4-73
Setting the station memory	
preset buttons	4-75

Using the seek function	4-74
AM/FM stereo radio with cassette player	4-70
Clock operation	4-81
Fast-forwarding the tape	4-78
Fast-rewinding the tape	4-78
How to eject the tape	4-79
How to insert a tape	4-78
How to play the other side of the tape	4-78
How to tune radio stations	4-73
Selecting the AM/FM frequency band	4-73
Setting the station memory	
preset buttons	4-75
Using the Automatic Music Search	4-78
Using the scan function	4-75
Using the seek function	4-74
AM/FM radio with Compact Disc Player	4-54
Automatic disc storage	4-66
Clock operation	4-57
Common operating conditions	4-68
Compression	4-66
How to care for and clean your CD player	
and discs	4-67
How to eject the disc	4-67
How to fast-forward or reverse	
your CD player	4-65
How to insert a disc and begin play	4-64
How to stop and restart the CD player	4-64
How to tune radio stations	4-58
How to turn the radio on and off	4-55

Selecting the AM or FM frequency band	4-58
Setting the station memory	
preset buttons	4-60
Special features of your CD player	4-66
Special radio features	4-63
Using the Automatic Memory Load and	
Automatic Memory Store features	4-61
Using the controls on the Compact	
Disc Player	4-63
Using the scan function	4-66
Using the scan/tune function to scan	4-60
Using the scan/tune function to tune	4-59
Using the seek function	4-59
Premium AM/FM stereo radio	
with cassette player	4-69
Changing the track of a tape	4-77
Clock operation	4-81
Fast-forwarding a tape	4-77
Fast-rewinding a tape	4-77
How to eject a tape	4-78
How to insert a tape	4-76
How to store a tape	4-78
How to tune radio stations	4-73
Setting the station memory	
preset buttons	4-75
Turning the radio on/off	4-55
Using the Automatic Memory Load and	
Store feature	4-76

	Page		Page		Page
Using the scan function		S			
(for the cassette player)	4-77	Safety Defects, Reporting	8-7	Seat Slide	2-11
Using the scan function (for the radio)	4-75	Safety Seat Tether Straps	2-25	Service Publications	8-8
Using the seek function		Scheduled Maintenance	7-3	Slide-In Camper	8-6
(for the cassette player)	4-77	Seat Adjustment	2-11	Snowplowing	3-11
Using the seek function (for the radio)	4-74	Seatback Lock	2-14	Snow Tires	3-10
Using the tune function	4-73	Seat Belt System	2-15	Spare Tire Removal	5-15
Rear Compartment	1-5	Extension assembly	2-22	Spare Tire Temporary	5-20
Radio Reception	4-51	Front	2-17	Special Driving Conditions	3-7
AM characteristics	4-51	Front center	2-18	Flooding	3-11
FM characteristics	4-51	Maintenance	2-22	Hazardous	3-7
Rear Quarter Windows	2-5	Pregnant women, seat belt usage	2-19	High-speed	3-9
Rear Seat Access	2-14	Rear lap	2-19	Hills	3-11
Rear Sliding Window	2-6	Rotated tongue, correction	2-21	Overloading	3-22
Rear Lap Belts	2-19	Twisted D-ring, correction	2-20	Rocking the vehicle	3-8
Rear Storage Compartment (with net)	2-30	Untwist/unjam	2-19	Sand	3-11
Rear-Wheel Antilock Brake System		Warning light/beep	2-16	Snowplowing	3-11
(Rear-Wheel ABS)	4-22	Seat Belt Warning Light/Beep	2-16, 4-32	Trailer towing	3-12
Warning light	433	Seat Recline	2-12	Wheel spin	3-8
Recommendations for Shifting	4-9	Seats	2-11	Winter	3-9
Downshifting	4-9	Bolster support adjustment	2-13	Special Radio Features	4-63
Upshifting	4-9	Headrest adjustment	2-13	Specifications	9-1
Repairing Damage to the Finish	6-3	Jump	2-15	Air conditioner	9-5
Replacing Windshield Wiper Blades	7-29	Lumbar support adjustment	2-13	Capacities	9-4
Reporting Safety Defects	8-7	Rear seat access	2-14	Dimensions	9-2
Rocking the Vehicle	3-8	Recline	2-12	Electrical system	9-4
Rope Holes	2-31	Slide	2-11	Engine	9-4
				Fuses	9-6
				Light bulbs	9-6

Index

	Page
Lubrication quality	9-2
Payload capacities	9-3
Tires	9-5
Speedometer	4-28
Split Front Bench Seat	2-11
Starting the Engine	4-4
Fuel injected engines	4-4
Sunvisors	4-41

T

Tachometer	4-29
Tailgate	2-6
Installation	2-8
Removal	2-8
Tape and Tape Player Care, Cassette	4-80
Tape Care, Cassette	4-80
Temperature Control Lever	4-43
Temperature Gauge	4-28
Temporary Spare Tire	5-20, 7-35
Tilt Steering	2-26
Tires	7-31
Chains	3-10
Inflation pressure	7-31
Rotation	7-32
Towing	5-10
4-wheel drive vehicles	5-11
2-wheel drive vehicles	5-10

10-8

	Page
Trailer Hitch	3-15
Trailer Towing	3-12
Transfer Case Shift Positions	4-13
Transmission, Automatic	4-10
Transmission, Manual	4-8
Transmission Fluid Level	7-26
Transmission Ranges	4-10
Trip Odometer	4-28
Turn Signals	4-36

U

Underbody Maintenance	6-3
-----------------------------	-----

V

Vanity Mirror	4-41
Vehicle Information Labels	3-23

W

Warning Lights Inspection	4-31
Warning Lights/Beeps	4-31
Brake system	4-31
Charging system	4-32
Engine oil level	4-33

	Page
4x4 indicator	4-34
Headlight high-beam	4-34
LOW RANGE indicator	4-34
Malfunction indicator	4-33
Rear-wheel ABS	4-33
Warning inspection	4-31
Warranties for Your Mazda	8-5
Washing	6-2
Waxing	6-2
Wheel Replacement	7-35
Windows	
Power	2-5
Rear quarter	2-5
Rear sliding	2-6
Windshield Defrosting and Defogging	4-47
Windshield Washer Fluid Level	7-27
Windshield Wipers and Washer	4-38
Washer	4-38
Wiper arm replacement	7-29
Wiper	4-38
Winter Driving	3-9

Y

Your Vehicle at a Glance	1-1
--------------------------------	-----

~ Quick Index ~

♦ If a warning lamp comes on or a beep sounds.....	4-31
♦ If your vehicle overheats	5-2
♦ If your vehicle needs to be towed	5-10
♦ If you have a flat tire	5-14

~ Gas Station Information ~

Fuel

Use UNLEADED Fuel only

Octane rating (antiknock index) of 87 or higher (Average of Research Octane Number and Motor Octane Number)

Fuel tank capacity

Regular Cab - Short bed = 16.3 US gal (13.6 Imp gal, 61.7 liters)

Regular Cab - Long bed = 19.6 US gal (16.3 Imp gal, 74.2 liters)

Cab Plus - 20.0 US gal (16.6 imp gal, 75.7 liters)

Engine oil

API Service SG Energy Conserving II (ECII)

Refer to page 7-14 for SAE viscosity recommendations

Tire inflation pressure

Refer to label on the driver's side door frame

8E75

Part No. 8E75-EA-93D
(9999-95-023C-94)

© 1993 Mazda Motor Corporation
Printed in U.S.A. 93-04